 



WA-1242U 4 DAY INTERNET POWERED TALKING WEATHER STATION Owner's Manual

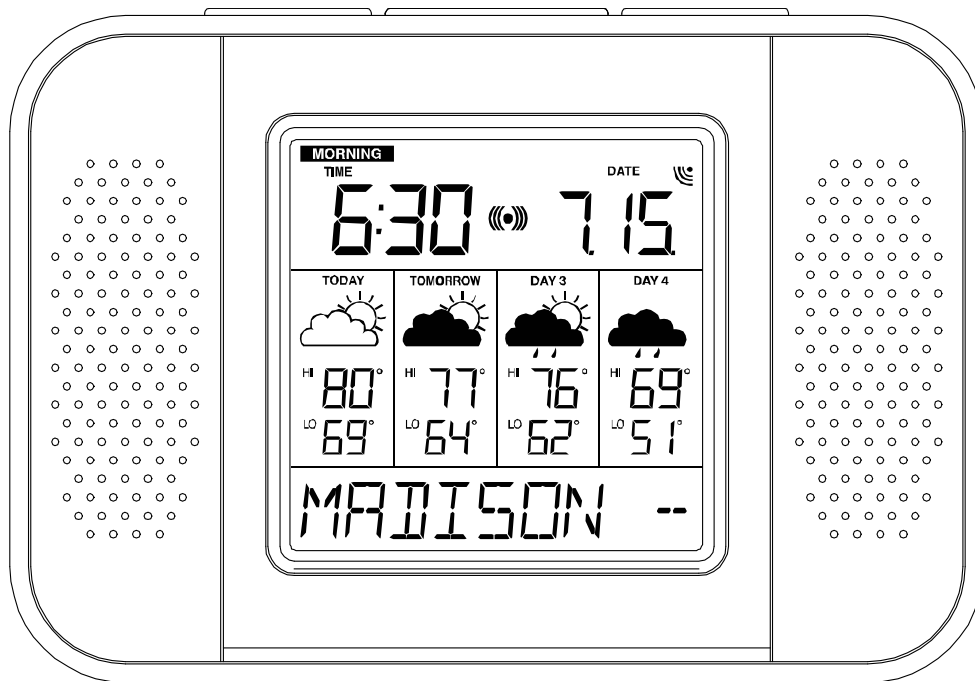

WEATHER DIRECT®
Presented by La Crosse Technology®

La Crosse Technology, Ltd.
www.weatherdirect.com
2809 Losey Blvd. S.
La Crosse, WI 54601
Phone 608-785-7935

Table of Contents

Table of Contents	2
Congratulations.....	4
Quality Forecasts.....	4
Weather Direct® is Green	4
Included in the Box	5
915 MHz Wireless Sensor Technology	5
What You Need to Get Started:.....	6
IMPORTANT MESSAGE:.....	7
Set Up your WA-1242U	7
Hardware Installation.....	7
Wireless Outdoor Sensor Installation Options	8
To Surface Mount the Outdoor Sensor:.....	8
To Wall Mount the Outdoor Sensor:	8
Gateway Installation	8
Online Resources	9
<i>Features</i>	10
Time Setting on Wireless Display.....	10
Wireless Outdoor Sensor	11
Edit Device Settings Online	12
Wireless Display Operation	16
"MODE" Key.....	18
"ALARM" Key	19
Turn Alarm ON/OFF.....	19
Set Alarm Time	19
"SNOOZE" Key	19
Alarm Snooze	19
View Outdoor Temperature.....	19
Manually Request a Weather Direct® Data Update	19
Listen to a Severe Weather Alert.....	20
"- VOLUME +" Key	20
Change the Volume of Audio Playback	20
Change a Setting While Using the "SET" Modes	20
Forecast "  " Key.....	21
Hear the Talking Weather Forecast.....	21
Set a Custom Greeting to Hear Before the Forecast.....	21
"A, B and C" Keys – Custom Audio Feeds.....	21
Assign an Audio Feed to the "A, B or C" Key	21

Hear the Audio Feed Assigned to the "A, B or C" Key 22

"SET" Key 22

 When ADD 4 LOCATIONS Expansion Option is *Active* 22

 Changing Settings on Your Wireless Display 22

 Set Mode 1 – Set LCD Contrast (1-8) 23

 Set Mode 2 - Set Text Scrolling Speed (1-3)..... 23

 Set Mode 3 – Factory Reset of Wireless Display 23

 Set Mode 4 - View Device ID..... 24

E-mail Functions 25

FREE Trial of Expansion Options for 14 Days 27

 Four Additional Forecast Locations..... 27

 Forecast Alerts 27

Severe Weather Alerts 28

 Types of Severe Weather Alerts:..... 29

Forecast Icons Explained 30

Care and Maintenance 31

Battery Low Icons 31

Battery Replacement 32

Troubleshooting 32

Specifications..... 32

 Temperature Range 32

 Battery Life 32

 Dimensions 32

 Weather Direct® Update Rate 32

 Weather Direct® Wireless Range..... 32

Power Requirements 32

Liability Disclaimer 33

FCC Statements 34

Warranty Information 35

Congratulations

You have just purchased the world's first Internet-Powered Weather Station. Weather Direct® uses the power of the Internet to deliver weather data and other important information tailored to you, because you are in control of the information it delivers.

We understand that no one likes having to read a manual, so we've tried to make this a fun and rewarding read. After all, Weather Direct® is all about you. It's like having your own personal assistant to tell you the weather how, when and where you want it. Knowing how Weather Direct® works will allow you to get the most out of this innovative new system.

Weather Direct® - Not Just Another Weather Station. Weather Direct® is the complete weather experience.

Quality Forecasts

Weather Direct® provides the most accurate forecast information available, customized to your exact location! Our forecasts go beyond backyard measurements by using Internet-enabled weather data provided by official National Weather Service instrumentation and local weather reporting stations widely distributed throughout North America.

The same quality weather information used by meteorologists to deliver the local forecast plus additional weather data unique to the Weather Direct® network is available to you 24 hours a day! We provide the most detailed, customized, up-to-date weather forecasts available on any medium. Weather Direct® allows you to pinpoint your exact location to ensure that you receive precision weather forecasts customized for you!

Weather Direct® is Green

We are doing our part to keep our planet healthy by eliminating our paper manuals, saving trees in the process. Not only are we reducing the amount of paper, but we are also trying to help you save space in your desk drawer, file cabinet or box in the basement where all these pesky manuals end up. Now you can print *only* the pages from this manual that you need... or not print any at all if you find what you are looking for online.

The Gateway uses only 1 watt of power with a two year battery life on the Wireless Display and Temperature sensor. Since the Weather Direct® system works even when your computer is off, you save money on electricity.

Included in the Box

The WA-1242U 4 Day Talking Weather Forecaster is a complete Weather Direct® system that includes:

- WA-1242U Wireless Display – Provides weather forecast information, time, date and other custom data from the Internet. Also receives and displays wireless outdoor temperature, from your backyard using the included Wireless Outdoor Sensor.
- Wireless Gateway + Mounting Plate – Powers your Weather Direct® System with weather data and other customizable feeds from the Internet. Sends data your Wireless Display with a wireless range of up to 330 feet (open air).
- TX-50U Wireless Outdoor Temperature Sensor + Mounting Plate – Measures the outdoor temperature where you are and sends temperature data to your Wireless Display with a wireless range of up to 330 feet (open air).
- (4) Screws and drywall anchors for mounting the Wireless Outdoor Temperature Sensor and the Wireless Gateway
- Quick Set Up Card
- Weather Club Information Card
- LAN cable to connect the Gateway to a network router
- AC adapter for Gateway

915 MHz Wireless Sensor Technology

This product offers:



INSTANT TRANSMISSION is the state-of-the-art new wireless transmission technology, exclusively designed and developed by LA CROSSE TECHNOLOGY®. *INSTANT TRANSMISSION* offers you an immediate update (every 4 seconds!) of all your outdoor data measured from the sensors: follow your climatic variations in real-time!

 
What You Need to Get Started:

- High-speed Internet connection – cable, DSL or other broadband Internet service will work. NOTE: If you only have a Dial-Up Internet connection, Weather Direct® will not work. However, you can use Weather Direct® Lite with a Dial-Up connection using your computer's USB port – see www.weatherdirect.com/lite
- Router or broadband modem with built-in router. (contact your Internet service provider ISP for information on compatibility with their service)
- If you have any questions about routers, or you would like a recommendation on a great router for use with Weather Direct®, see - www.weatherdirect.com/router
- Valid e-mail address – required to make sure you can retrieve your password and receive other information about your user profile.
- 2 "AA" **Alkaline** batteries for the Wireless Outdoor Sensor
 - ★ **NOTE:** *Rechargeable batteries are not recommended due to the wide variation in performance between brands and types. Please use only fresh Alkaline batteries.*
- 3 "C" **Alkaline** batteries for the Wireless Display
 - ★ **NOTE:** *Rechargeable batteries are not recommended due to the wide variation in performance between brands and types. Please use only fresh Alkaline batteries.*
- Visit www.weatherdirect.com and click "Register" to Start
- After you have registered and selected a forecast location and Time Zone for your Wireless Display, the forecast data will show up on the display within 60 seconds.
- A reasonably current Windows, Macintosh, or Linux PC with internet browser installed is required for initial set up and configuration changes.
- The browser must be configured with Java Script enabled. Most browsers allow JavaScript as a standard feature. If you have turned off support for JavaScript in your browser, please allow JavaScript to run again to register or configure your Device.

IMPORTANT MESSAGE:

Please DO NOT insert batteries into the Wireless Display or the Outdoor Sensor until instructed to do so.

Connect the Gateway to an available LAN port on your network router with the LAN cable (included) and then power up the Gateway with the AC Adapter (included).

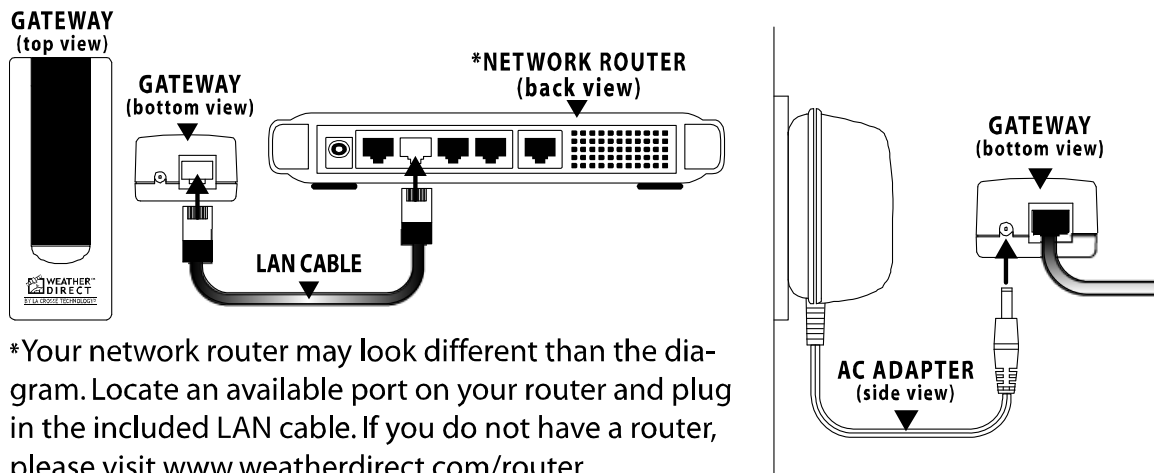

Set Up your WA-1242U

- ★ **NOTE:** The **Quick Set-Up Card** that is included in the box contains additional instructions to help you get started quickly if you want to perform a basic setup of your Weather Direct® system without reading this entire manual.

Open www.weatherdirect.com in a web browser and click "REGISTER" at the top of the page. Our Online Registration Wizard will guide you through the complete registration process.

Hardware Installation

 
- ★ **NOTE:** Hardware installation is only intended to be performed after you have registered your Gateway and Wireless Display, inserted batteries into the Wireless Outdoor Temperature Sensor, and have confirmed successful reception of weather data.

Wireless Outdoor Sensor Installation Options

- ★ **NOTE:** Move the Wireless Outdoor Sensor into its intended location and wait for 10 minutes to make sure the outdoor temperature is still being received by the Wireless Display. Press the "SNOOZE" Key on your Wireless Display to show the outdoor temperature. If the display shows -,-F for the outdoor temperature, the signal cannot reach the Wireless Display. Find a closer location to mount the Wireless Outdoor Sensor and wait 10 minutes to check the Wireless Display again for reception.


- ★ **DO NOT mount the Wireless Outdoor Sensor in a permanent fashion until you are sure the signal is being received by the Wireless Display.**

To Surface Mount the Outdoor Sensor:

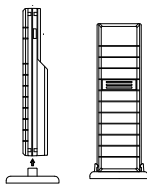

We have provided a mounting plate that you can attach to a surface with the supplied screws. The Sensor can be positioned on a flat surface by securing the stand to the bottom by gently pushing the bottom of the Sensor onto the holding pegs of the stand until they click into place in the grooves on the Sensor.

 
To Wall Mount the Outdoor Sensor:



The Outdoor Sensor is weather resistant, but not water proof. To ensure maximum Sensor life, mount it in a covered place out of the elements like under the eaves. Placement on the North side of your home will provide the most accurate readings. Mount it about 18" down from the eaves for optimum performance. This ensures that the weather data collected by the Outdoor Sensor will not be affected by the temperature of the air leaving the attic.

We have provided a mounting plate that you can attach to the wall with the supplied screws. Gently snap the Sensor onto the holding pegs on the mounting plate after the plate is screwed to the wall. When the holding pegs are securely locked into the slots on the Sensor, you will hear a "Click".

 
Gateway Installation

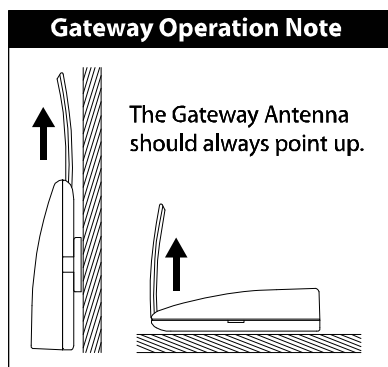

The Gateway should be installed indoors in an easy-to-reach location. Registration requires that you press the gray button on the Gateway. It can be mounted securely to the wall with the included mounting plate and drywall anchors.

If you require a longer LAN cable to mount the Gateway in a desired location, any standard Category 5 network cable will work, but a crossover cable may not work. Crossover cables designed to connect two computers without networking hardware may not work with your Gateway.

★ **NOTE:** *Network cables usually have length limitations. The same length limitations will apply that apply to computers on your home network.*

The Gateway sends weather forecasts to your Wireless Display over a maximum 330 ft. range. Walls and other obstructions between the Gateway and Wireless Display will affect the range. The Wireless Signal Icon  will indicate the signal strength to let you know if your Gateway and Wireless Display are within range.

Online Resources

These links can help to enrich your Weather Direct® experience:

- Help – www.weatherdirect.com/help
- FREE Membership Included to the Weather Club, at www.theweatherclub.com featuring:
 - Online weather forecasts by Meteorologist Paul Douglas
 - Radar maps
 - Video and photo uploads
 - And Much more!
- For a list of places to choose from as forecast locations - www.weatherdirect.com/places

Features

- Free Forecasts for Over 60,000 Locations in the United States and Canada, Including Your Hometown, Golf Courses, Parks Sports Venues and More.
- Talking Weather Forecasts and Talking E-mail Messages
- Automatically Updates Itself via the Gateway
- 4 Day Forecast with Daily Sky Condition Icons
- Specific Forecast for Morning, Afternoon, Evening and Night and Full Day
- Lower LCD Line Scrolls City Name, Forecast, Outdoor Temperature, Sun Rise/Set
- Lower LCD Line Scrolling Speed Adjustment (1-4)
- LCD Contrast Setting (1-7)
- Daily HI / LOW Temperature Forecast
- Wireless Outdoor Temperature (°F/°C)
- Monitor Your Outdoor Temperature From Anywhere in the World on a Free Membership to the Online Weather Club. For more details, please visit www.theweatherclub.com
- Time Alarm with Snooze
- Time and Date Set Automatically
- Low Battery Indicator on the LCD and the web site for the Wireless Display and Outdoor Sensors

Time Setting on Wireless Display

The Time Zone you select on www.weatherdirect.com for your Wireless Display is intended to set the time for your physical location so the clock on your Wireless Display is accurate. This time is independent of your selected forecast locations. The Wireless Display will ONLY display the time from the "Time Zone for Wireless Display Clock" set on the web site, NOT the time at the forecast locations. There is only one Time Zone available per Wireless Display.



Weather Station 1 - Registered to Gateway: Gateway 1

Wireless Display Settings

Wireless Display name

Note: The Wireless Display name is used only on the web site

Time Zone for Wireless Display Clock

 Use Daylight Saving Time

Display all Temperatures as

 
Forecast Settings for Wireless Display

Search By

The Daylight Saving Time (DST) checkbox on your Wireless Display settings at www.weatherdirect.com is selected by default because most locations observe DST. If you are in a location that does not observe DST, please make sure to uncheck this box.

Wireless Outdoor Sensor

The Wireless Outdoor Sensor sends temperature data to your Wireless Display, accurate to within a tenth of one degree.

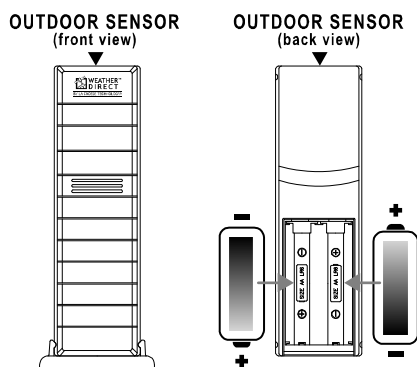

The Outdoor Temperature Sensor uses 2 x "AA", **Alkaline** batteries. To install and replace the batteries, please follow the steps below:

1. Remove the battery compartment cover on the back of the sensor.
2. Insert the batteries, observing the correct polarity (see marking).
3. Replace the battery compartment cover on the unit.

Press the "SNOOZE" Key on your Wireless Display to show the outdoor temperature at any time. The outdoor temperature will scroll on the bottom of the LCD.

Edit Device Settings Online

This section will show you how to set up your Wireless Display using your account at www.weatherdirect.com.

- Log In to your profile on www.weatherdirect.com and click on your WA-1242U Wireless Display under the "My Devices" banner

The screenshot displays the My Weather Direct website. At the top, there is a navigation bar with the La Crosse Technology logo, the text 'PRESENTS MY WEATHER DIRECT', and a 'FRANÇAIS' link. Below this is a secondary navigation bar with links for 'MY WEATHER DIRECT', 'REGISTER', 'PRODUCTS', 'HELP', 'ABOUT', 'EXPANSION OPTIONS', and 'DOWNLOAD'. A user is logged in, with a 'Logout' link provided. A 'MY WEATHER DIRECT' banner features a house icon and a 'Go To Website Edit Settings' button. A 'Hello' message welcomes the user back and offers options to change their profile or register new devices. The 'My Devices' section shows a list of registered devices, including 'Gateway 1' and 'WA-1242U'. A callout box with an arrow points to the 'WA-1242U' device, with the text 'Select Your Wireless Display'. Below this, a 'VIEW EXPANSION OPTIONS' banner offers 'COMPLETE PACKAGES', 'ADD 4 DISPLAY LOCATIONS', and 'WEATHER ALERTS' with a 'FREE 14 DAY TRIAL' badge. At the bottom, there is a copyright notice for La Crosse Technology Ltd. 2009 and links to 'Terms and Conditions of Use' and 'Privacy Policy'.

- Click the "Edit Device Settings" button

The screenshot shows the My Weather Direct user interface. At the top is a navigation bar with the logo and menu items: MY WEATHER DIRECT, REGISTER, PRODUCTS, HELP, ABOUT, EXPANSION OPTIONS, and DOWNLOAD. A language selector for FRANÇAIS is on the right. Below the navigation bar, a user is logged in, with a Logout link. A banner for MY WEATHER DIRECT and THE WEATHER CLUB.COM is visible, with buttons for Go To Website and Edit Settings. The main content area is titled "WA-1242U - Registered to: Gateway 1". It features a sidebar with navigation options like My Home Page, My Profile Details, Identify Device, Register Gateway, Gateway 1, Register Device, and WA-1242U. The main content displays an "Overview for Device" table with fields such as Device Id, Registered to Gateway, Date Registered, Last Seen, Link Quality, Battery, Configured Location(s), and Warning Location(s). Below this is a table for "Upgrades/Trials" with columns for Function and Valid until. At the bottom, there are two buttons: "Edit Device Settings" and "Delete this Device". A callout box with a blue arrow points to the "Edit Device Settings" button, containing the text "Click 'Edit Device Settings'".

You are logged in as:

[Logout](#)

MY WEATHER DIRECT

THE WEATHER CLUB.COM

[Go To Website](#) [Edit Settings](#)

WA-1242U - Registered to: Gateway 1

My Weather Direct®

- My Home Page
- My Profile Details
- Identify Device
- Register Gateway
- Gateway 1
 - Register Device
 - WA-1242U

Overview for Device		Click here for product page (manual, features...)
Device Id:	000194591A17D66E	
Registered to Gateway:	Gateway 1	
Date Registered:	4/16/2009 7:18:25 AM	
Last Seen:	7/9/2009 3:32:05 PM	
Link Quality:	100 %	
Battery:	OK	
Configured Location(s):	La Crosse (Wisconsin / La Crosse)	
Warning Location(s):	n/a	
Upgrades/Trials		
Function	Valid until	
Additional 4 Forecast Locations (Trial)	7/28/2009	
Forecast Alerts (Trial)	7/28/2009	

Click "Edit Device Settings"

[Edit Device Settings](#) [Delete this Device](#)

- Scroll down to the desired section on the setup page and enter your preferences.
- Click the "Save Settings" button to finish

MY WEATHER DIRECT™ REGISTER PRODUCTS HELP ABOUT EXPANSION OPTIONS DOWNLOAD

You are logged in as: [Logout](#)

MY WEATHER DIRECT™

WA-1242U - Registered to: Gateway 1

Wireless Display Settings

Wireless Display name

Note: The Wireless Display name is used only on the web site

Time Zone for Wireless Display Clock
 Set Wireless Display Time Zone

Use Daylight Saving Time

Display all Temperatures as

Forecast Settings for Wireless Display

Audio Forecast Greeting Text:
 Set Audio Forecast Greeting
(50 character maximum)

Audio Forecast Greeting Voice: Male Female

Location 1 Location 2 Location 3 Location 4 Location 5

Search By

Search for (Do not include state)

Results:


Please choose which forecasts you would like to hear when you press the Forecast Key on your wireless display.

	Full Day Forecast	Micro-Forecast	None
Today:	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Tomorrow:	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>
Day 3:	<input type="checkbox"/>	Not Available	<input checked="" type="checkbox"/>
Day 4:	<input type="checkbox"/>	Not Available	<input checked="" type="checkbox"/>

[PLAY PREVIEW](#)

Set Custom Audio Feeds and E-mail Settings

 The "Edit Advanced Audio Settings" button takes you to an interface where you can set up the custom audio feeds and e-mail functionality.

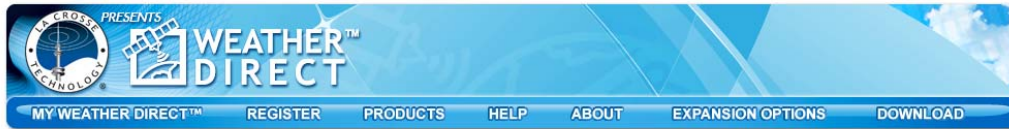

You are logged in as:
[Logout](#)



WA-1242U - Registered to: Gateway 1

- My Weather Direct®
- Home My Home Page
- My Profile Details
- Identify Device
- Register Gateway
- Gateway 1
- Register Device
- WA-1242U

Audio Settings for Wireless Display

My Alarm Settings

I want to wake up to:

The Forecast for: Location 1

An Alarm Sound

An Audio Feed

Audio Feed A

Audio Feed B

Audio Feed C

Alarm Playback (minutes) 1

The alarm audio will play for the number of minutes selected above. If the audio is longer than the selected number of minutes then the audio will end abruptly. If the audio is shorter than the selected number of minutes then the audio will repeat and play until the number of minutes is reached then end abruptly. NOTE: Setting the number of minutes will adversely affect battery performance.

Audio Feed Selection

Select what will play when you press a particular button.

Audio Feed A | Audio Feed B | Audio Feed C

Please choose a content feed for the Key on your Wireless Display. You can assign up to three feeds to play when you Press the Key on your Wireless Display.

	Source	Max Feed Item Count
Feed 1	Select a source	<input type="text"/>
Feed 2	Select a source	<input type="text"/>
Feed 3	Select a source	<input type="text"/>

[PLAY PREVIEW](#)

Select Custom Audio Feeds



Enable E-mail Functionality



Audio Email Configuration

Enable Email for This Device

My Weather Direct email address is: @weatherdirect.com

Email Whitelist Configuration

Whitelist Settings

The weather station will only allow email from sources specified in this list. To allow email from a source, enter the domain or specific address that you will receive mail from in the text box and click the Add button.

Enter an Email Address or Domain:

eg. "myname@yahoo.com" or "@yahoo.com"

Current Whitelist Addresses for This Device

@topasiahk.com [Delete](#)

Enter Allowed Addresses of E-mail Senders



Set Number of Lines to Read from Each E-mail Message



Number of lines of email's Body to read. (max message size is 45k) (Sender and Subject will always be read.)

10

When my device inbox is full:

Overwrite the oldest message(s)

Do not download new messages


Send me a notification that my inbox is full

You will have to do a manual update on the device to receive changes made here. After saving these settings please do a manual update by:

 
 
Pressing and holding the 'Snooze' button on your display until you hear a beep.

 
Wireless Display Operation

This section will teach you how to use your Wireless Display once you have completed online registration.


There are 9 control Keys located on the top of the Wireless Display: "Forecast" , "A", "B", "C", "SET" and "MODE", "ALARM", "SNOOZE" and "- VOLUME +"

The following information is divided into sections based on the function of each Key.

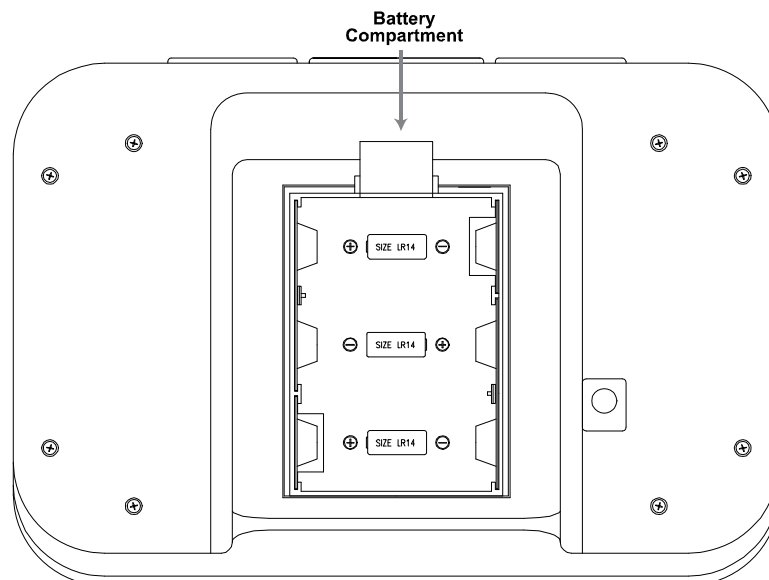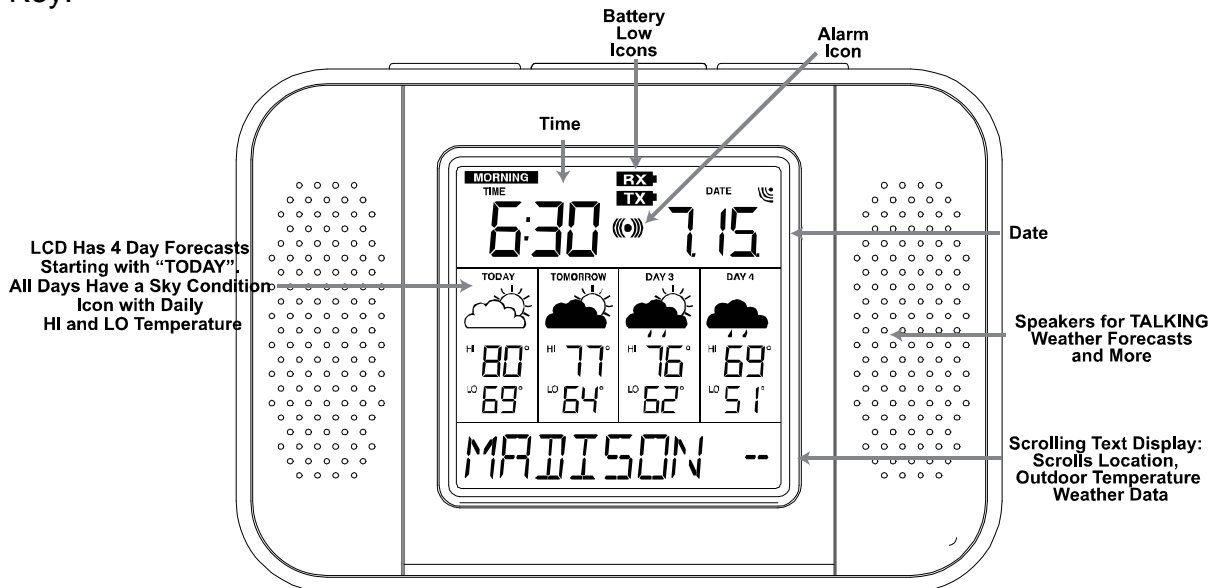

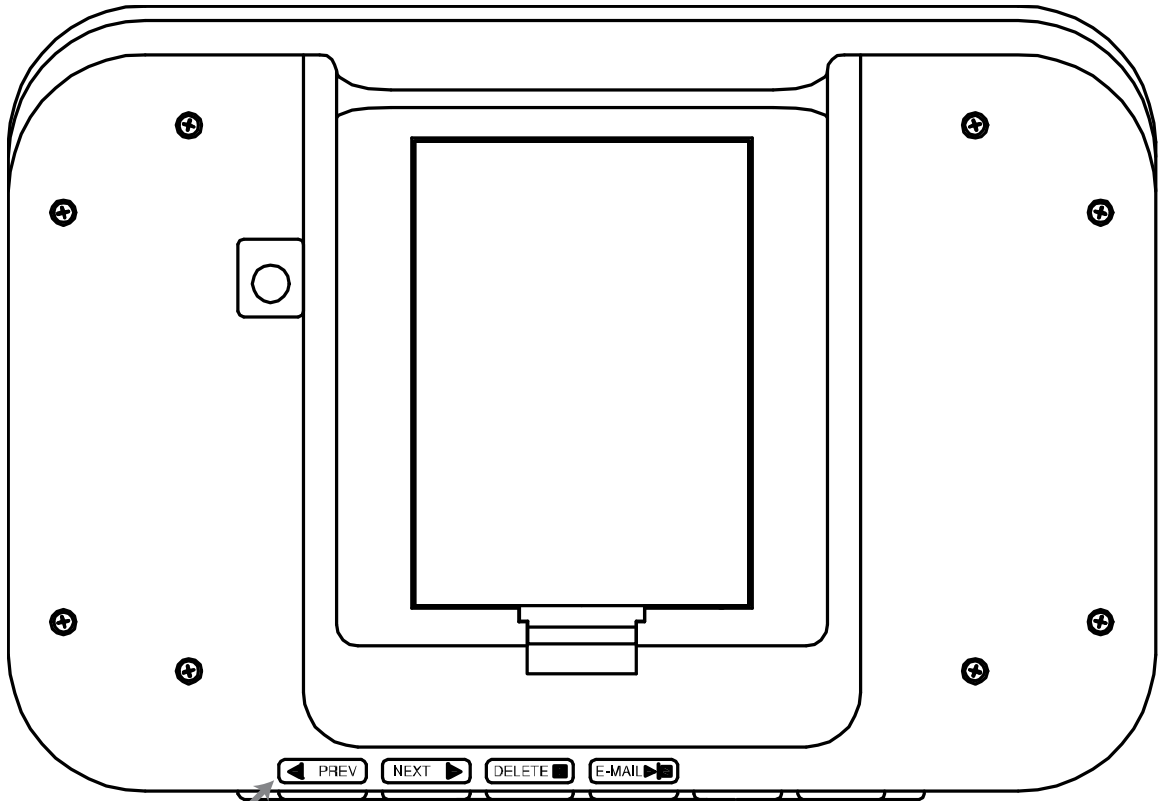

E-mail Function Labels

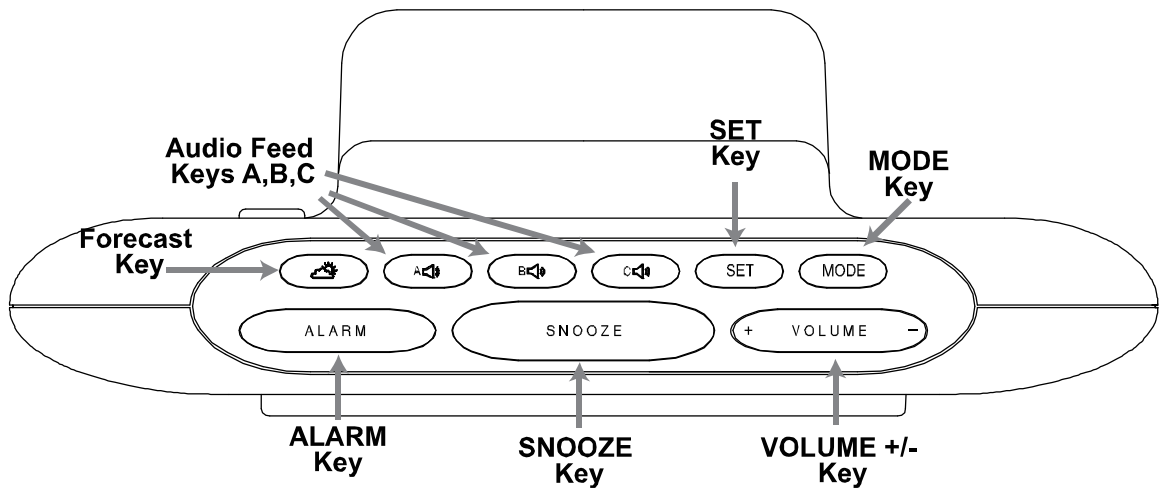 

"MODE" Key

Specific Forecasts help you prepare for different weather conditions during the day by providing weather information for Morning, Afternoon, Evening and Night.

You'll know if the weather during the morning commute will be different from the weather during the rest of the day.

You'll know to bring your umbrella to work on a deceptively beautiful sunny morning, because Micro Forecasts will inform you that it will rain in the afternoon on your way home.

Going to the game today? The Afternoon and Evening forecasts are a lifesaver! Micro Forecasts help to make sure that you pack a blanket or a rain coat if needed.

Work 2nd or 3rd shift? Receive detailed forecast information tailored to specific times of the day when you are the most active.

You can change the Micro Forecast reading on your Wireless Display by pressing the "MODE" Key to toggle between the available options.

Press the "MODE" Key to cycle through the Micro Forecast options:

1. **MORNING**
Forecast from 6:00 AM - 11:59 AM with Daily HI/LO Temperature
2. **AFTERNOON**
Forecast from 12:00 PM - 5:59 PM with Daily HI/LO Temperature
3. **EVENING**
Forecast from 6:00 PM - 11:59 PM with Daily HI/LO Temperature
4. **NIGHT**
Forecast from 12:00 AM – 5:59 AM with Daily HI/LO Temperature
5. **ROLL DAY**
Rotates between the four Micro Forecasts and the Daily Forecast
6. **SECTION+**
Shows the forecast for the next six hour period so you can be prepared for the upcoming weather. If it was morning now, it would show the afternoon forecast. If it was evening now, it would show the night forecast, etc.

7. ONLY DAY

Shows only the Daily forecast when you are only interested in the weather for the day rather than forecasts for morning, afternoon, evening or night.

"ALARM" Key

Turn Alarm ON/OFF

- Press the "ALARM" Key to turn the alarm ON. The Alarm icon "((•))" will appear on the LCD.
- Press the "ALARM" Key again to turn the alarm OFF. The Alarm icon "((•))" will disappear from the LCD.
- Press the "ALARM" Key when the alarm is sounding to stop the alarm for 24 Hours.

Set Alarm Time

- Press and Hold the "ALARM" Key until the hours digit flashes to set the alarm time. Alarm will sound once every 24 hours while active.
- Press the "VOLUME +" Key to change the hour. "PM" will indicate a PM time, while no icon next to the time means AM time.
- Press the "ALARM" Key again and the minutes digit will flash.
- Press the "VOLUME +" Key to change minutes.
- Press the "ALARM" Key once more to return to normal display

"SNOOZE" Key

Alarm Snooze

- Press the "SNOOZE" Key to temporarily silence the alarm for 5 minutes. The Alarm icon "((•))" will flash on the LCD while the Snooze function is active. Press any Key to cancel Snooze and turn the Alarm off until tomorrow.

View Outdoor Temperature

- Press the "SNOOZE" Key to view the current outdoor temperature from your synchronized wireless outdoor sensor.

Manually Request a Weather Direct® Data Update

- When you register your Wireless Display, the weather data is updated within a few minutes. Every 6 hours after that, your Gateway will send weather data to update your Wireless Display.

- After changing the forecast location or other setting on the web site, it can be up to six hours for your next scheduled automatic update.
- After adding an Expansion Option to your Wireless Display, it can be up to six hours for your next scheduled automatic update.
- If you do not want to wait for your Wireless Display to update automatically, Press and Hold the "SNOOZE" Key for 3 seconds until your Wireless Display beeps once. A second beep within a few seconds will signify that the Wireless Display is receiving the data. The bottom of the LCD will read "UPDATE" and a number code until the Wireless Display has finished downloading the weather and audio data.

Listen to a Severe Weather Alert

- Press and hold the "SNOOZE" Key for one second to hear the current active Severe Weather Alert.
- The Severe Weather Alert text will scroll across the bottom of the LCD.
- Press the "SNOOZE" Key again to cancel playback of the Severe Weather Alert and return to normal mode.

"- VOLUME +" Key

Change the Volume of Audio Playback

- Press the "- VOLUME +" Key on the "+" side to increase the volume.
- Press the "- VOLUME +" Key on the "-" side to decrease the volume.
- "VOLUME" and the current setting will display on the bottom of the LCD while setting the volume.
- The Volume range is from 1-20

Change a Setting While Using the "SET" Modes

★ **NOTE:** See the section on the "SET" Key on **page 22** for more information.

- Press the "- VOLUME +" Key on the "+" side to increase the setting.
- Press the "- VOLUME +" Key on the "-" side to decrease the setting.

Forecast "☁️" Key

Hear the Talking Weather Forecast

- Press the ☁️ Key to hear the Talking Weather Forecast with custom greeting message. You can set the custom greeting message to be spoken before the forecast.
- It will take the server a little time to process your Talking Weather Forecast after you make changes to your setup. Please be patient. While the server processing is happening, we automatically send Weather to your LCD display, including icons and scrolling text. You will receive this LCD Weather data first, and then the Talking forecast as soon as it is ready.

Set a Custom Greeting to Hear Before the Forecast

- See "**Edit Device Settings Online**" on **page 12** for information on how to access the setup page for your Wireless Display.
- Scroll down to the "Audio Forecast Greeting Text" section
- Enter your Greeting, up to 50 characters long
- Click the "Save Settings" button to finish



"A, B and C" Keys – Custom Audio Feeds

Assign an Audio Feed to the "A, B or C" Key

- See "**Edit Device Settings Online**" on **page 12** for information on how to access the setup page for your Wireless Display.
- Click on the "Advanced Audio Settings" button
- Scroll down to the "Audio Feed Selection" near the bottom
- You can assign up to three feeds to play when you press this Key
- Select your Audio Feeds
- Click the "Save Settings" button to finish

Audio Feed Selection
Select what will play when you press a particular button.

Audio Feed A Audio Feed B Audio Feed C

Please choose a content feed for the  Key on your Wireless Display.
You can assign up to three feeds to play when you Press the  Key on your Wireless Display.

	Feed	Item Count
Feed 1	ScienceDaily: Latest Science News	2
Feed 2	Advice of the Day (from The Old Farmer's Almanac)	1
Feed 3	Men's Health	2

Save Settings Cancel Delete this Device

Hear the Audio Feed Assigned to the "A, B or C" Key

- Press the "A, B or C" Key to hear the Audio Feeds you chose
- It will take the server a little time to process your Audio Feeds after you make changes to your setup. Please be patient. While the server processing is happening, we automatically send Weather to your LCD display, including icons and scrolling text. You will receive this LCD Weather data first, and then the audio feed as soon as it is ready.

"SET" Key

When ADD 4 LOCATIONS Expansion Option is *Active*

Press the "SET" Key to toggle between the forecast locations on the Wireless Display when the ADD 4 LOCATIONS Expansion Option is active. The name of the location will appear briefly on the bottom of the LCD when it is selected. Weather data for up to 5 locations can be viewed on your Wireless Display.

Changing Settings on Your Wireless Display

Press and hold the "SET" Key until the Wireless Display beeps to enter the SET mode. Press the "SET" Key to toggle through the four SET modes. If you wait for 5 seconds without pressing a Key, the Wireless Display will exit the SET mode and return to normal operation.

The Four SET modes are:

Set Mode 1 – Set LCD Contrast (1-8)

- Press and Hold the "SET" Key until the Wireless Display beeps to enter the SET mode
- "CONTRST" and number (1-8) will display on the bottom of the LCD
- Press the "VOLUME +" Key to update the LCD Contrast settings.
Lightest Contrast = "1", Darkest Contrast = "8"
- Press the "SET" Key to save the current settings and advance to the next option

- Press the "SET" Key to save the current settings and advance to the next option

Set Mode 2 - Set Text Scrolling Speed (1-3)

- Press the "SET" Key until "Scr" flashes at the top and "SET SCROLL SPEED" scrolls across the bottom
- The standard speed is set to "2"
- There are four speeds available – "1" is the slowest and "4" is the fastest
- Press the "VOLUME +" Key to change the scroll speed.
- Press the "SET" Key to save the current settings and advance to the next option

Set Mode 3 – Factory Reset of Wireless Display

- ★ **NOTE:** *It is not possible to re-register a previously registered Wireless Display under a new account until the Wireless Display has been deleted from the user account on www.weatherdirect.com and a Factory Reset has been performed.*

- ★ **NOTE:** *Expansion Options that are Lifetime Upgrades are still active on your Wireless Display even if you delete it from your user account on www.weatherdirect.com or perform a Factory Reset. The selection of locations and other custom settings will need to be performed again if the Wireless Display is re-registered.*

- ★ **WARNING:** *The Factory Reset procedure will erase any registration and setup information from your Wireless Display. You must register the Wireless Display again with www.weatherdirect.com to use it after a Factory Reset.*

- ★ **WARNING:** *Deleting the Wireless Display from a user account on www.weatherdirect.com will erase the weather and other setup information such as forecast locations from the Wireless Display.*

If you have trouble registering your Wireless Display after multiple attempts, you can try a Factory Reset.

If you wish to give your Wireless Display to someone else or simply to register it under a different user account, you must perform the Factory Reset to clear the registration information from the memory of the Wireless Display and delete the device from the user account on www.weatherdirect.com

Additional diagnostic and reset information, including how to reset the gateway (if necessary), is contained at www.weatherdirect.com/help

TO PERFORM THE FACTORY RESET:

- Press the "SET" Key until "RESET NO" displays on the bottom of the LCD
- Press the "VOLUME +" Key until the LCD displays "RESET RUN".
- Press the "SET" Key to save the current settings. This resets the Wireless Display to the original factory state.

Set Mode 4 - View Device ID

- ★ **NOTE:** *Device ID is a reference item for customer service only. You may press the "SET" Key again to exit SET mode if you are not asked to provide this number by customer service.*

- Press the "SET" Key until an 8- digit sequence of letters and numbers appears at the bottom of the LCD. For example - "6FFFF2D32" – This is the first part of the Device ID
- Press the "SET" Key again to view second part of the Device ID

E-mail Functions






To receive e-mails on your wireless display, you must enable e-mail messages with your online account. The e-mail settings are found under "Advanced Audio Settings" when setting up your display - the checkbox next to "Enable Email for This Device" must be checked.






The screenshot shows the "Audio Email Configuration" settings page. It includes a checkbox for "Enable Email for This Device" which is checked. Below this is a field for "My Weather Direct email address is:" with the value "@weatherdirect.com". The "Email Whitelist Configuration" section includes "Whitelist Settings" with instructions on how to add email addresses. There is an "Add" button next to a text input field. Below this is a list of "Current Whitelist Addresses for This Device" with "@topasiahk.com" and a "Delete" link. At the bottom, there is a dropdown menu for "Number of lines of email's Body to read" set to "10", and radio buttons for "When my device inbox is full:" with "Overwrite the oldest message(s)" selected. A checkbox for "Send me a notification that my inbox is full" is also present. Three callout boxes are overlaid on the image: "Enable E-mail Functionality" points to the "Enable Email for This Device" checkbox; "Set Number of Lines to Read from Each E-mail Message" points to the dropdown menu; and "Enter Allowed Addresses of E-mail Senders" points to the "Add" button.

To prevent unwanted e-mail(spam) from being sent to your display, you must add any e-mail addresses that you wish to receive messages from to the "whitelist". You can add a single e-mail address, or add an entire domain by leaving out the username and just adding "@domainhere.com" to the "whitelist". This will allow you to receive messages from any e-mail address at the entered domain.

Your e-mail address will be set to:



- YourWeatherDirect®Username@weatherdirect.com.
- You can set up your existing e-mail account to forward or "CC" messages to your Weather Direct® e-mail address using the tools provided by your existing e-mail host if you wish. We cannot assist you with this process, because every e-mail host is different.

The , A, B and C keys have a second function when the device is in "EMAIL" mode. The labels for the second functions are printed on the back of the wireless display, and can easily be read by tilting the display toward you so you can read the labels on the back from above the display:    


-  /  Key: Previous e-mail
- "A" /  Key: Next e-mail
- "B" /  Key: Delete e-mail
- "C" /  Key: Play or Stop e-mail, Switch between "WEATHER" and "EMAIL" modes

By default, the wireless display is in "WEATHER" mode. To enter "EMAIL" mode, press the "C" Key for two seconds. The display will show "EMAIL".



Play an e-mail:

- Press and release the "C" /  Key. When there is a valid e-mail file, the oldest/ or last selected file will be played. Otherwise the display shows "NO EMAILS".
- Every email has a unique e-mail ID. Older e-mails have smaller IDs and newer e-mails have larger IDs.
- To stop playback of an e-mail , press and release the "C" /  during playback.


Go to next e-mail:

- To go to next (newer) e-mail press and release the "A" /  Key. The next email will be played.

Go to previous e-mail:

- To go to previous (older) email press and release the  /  Key. The previous email will be played.


Delete e-mail:

- To delete the actual e-mail from the display, press and hold the "B" /  Key for 2 seconds. Display will show "DELETED, EMAILS XX" or "DELETED, NO EMAILS" when there are no email files in buffer. After a message is played, the display will show for a few seconds the no. of email messages in buffer "EMAILS XX" (XX=01...42) or "NO EMAILS" when there are no e-mail files in buffer.

Error messages for e-mails:

- When device tries to download an email file and there is no free buffer display shows "ERROR NO FREE EMAIL BUFFER, PLEASE DELETE SOME MESSAGES".

Switch back to "WEATHER" mode:

To switch back from "EMAIL" mode to "WEATHER" mode, press and hold the "C" /  Key for two seconds. The display will show "WEATHER".

FREE Trial of Expansion Options for 14 Days

When you register your Wireless Display and have the included forecast location selected, you will be given the opportunity to try our most popular Expansion Options FREE for 14 Days! NO CREDIT CARD OR PAYMENT REQUIRED!

14 Days of FREE Expansion Options, including:

1. 4 Additional Forecast Locations on your Wireless Display
2. Forecast Alerts

Four Additional Forecast Locations

The standard Weather Direct® Wireless Display includes weather information for one location. - But what about the weather happening in other places that are important to you?

In addition to your standard location, the ***Four Additional Locations Expansion Option*** allows you to monitor four more forecast locations on your Wireless Display, for a total of five.

Press the "SET" Key on your Wireless Display to display the weather data for another forecast location. You can have up to five locations on your Wireless Display. Every press of the "SET" Key rotates through the list of available locations.

Now you can keep an eye on the weather where your daughter goes to school, your favorite vacation spot, your parents' house and more.

Forecast Alerts

Forecast Alerts allow you to receive a text message or e-mail alert when the chance of rain/snow, hi/low humidity, or hi/low outdoor temperature is outside of your desired range. The wireless display will also sound audible alarms.

Severe Weather Alerts

Keep your family safe with Severe Weather Alerts issued by the National Weather Service. This valuable information will help you prepare for upcoming weather events. Choose which types of severe weather events you want to receive. Even be alerted via e-mail or SMS text message when you are away from your Wireless Display!

Severe Weather Alerts are available for either 1 year or 3 year periods that cover one forecast location. You can add up to 5 total alert locations if you also have the Add 4 Locations Expansion Option active.

Severe Weather Alerts are available for any of our forecast locations.

Weather Direct® is not liable for any incidents that may occur as a result of any National Weather Service alert. This alert service is provided as a convenience to make you aware of a potential situation, not as a replacement for local severe weather warning systems.

Types of Severe Weather Alerts:





 































<i>Warnings</i>		
Blizzard	Heavy Rainfall	Severe Thunderstorm
Coastal Flood	Heavy Snow	Severe Wind
Excessive Heat	Heavy Snowfall	Small Craft
Flash Flood	High Wind	Special Marine
Flood	Hurricane Force	Storm
Freeze	Ice Storm	Tornado
Frost	Lake Effect Snow	Weather
Gale	Lake Snow	Wind Chill
Heavy Rain	River Flood	Winter Storm

<i>Watches</i>		
Coastal Flood	Flood	Lake Effect Snow
Excessive Heat	Freeze	Lake Snow
Flash Flood	High Wind	River Flood

<i>Advisories and Statements</i>		
Blowing Dust	Heat	Tropical Storm Statement
Blowing Snow	Heavy Snow	Urban And Small Stream Flood
Dense Fog	Hurricane Statement	Urban Flood
Freezing Drizzle	Lake Effect Snow	Wind
Freezing Fog	Small Stream Flood	Wind Chill
Freezing Rain	Snow	Winter Weather
Frost	Snow And Blowing Snow	

Forecast Icons Explained

There are two sets of icons presented on your Wireless Display, one for day and one for night. A sun appears on many of the day icons while a moon appears on many of the night icons. Night icons only available with the Micro Forecast Expansion Option.

	DAY	NIGHT		DAY	NIGHT
Sunny (Clear at night)			Storms (Light rain)		
Light cloud			Storms (Heavy rain)		
Mostly cloudy			Heat storms		
Overcast			Sleet showers		
Showers (Light rain)			Snow showers (Light snow)		
Showers (Heavy rain)			Snow showers (Heavy snow)		
Light rain			Sleet		
Heavy rain			Light Snow		
			Heavy Snow		
			Snow storms (Heavy snow)		

★ **NOTE:** Trace precipitation will not display droplets on the icon and "MEDIUM" conditions generally use the "HEAVY" icons to communicate weather events that are likely to affect your plans for the day.

Care and Maintenance

- Extreme temperatures, vibration and shock should be avoided as these may cause damage to the unit and give inaccurate readings.
- Precautions shall be taken when handling the batteries. Injuries, burns, or property damage may be resulted if the batteries are in contact with conducting materials, heat, corrosive materials or explosives. The batteries shall be taken out from the unit before the product is to be stored for a long period of time.
- Immediately remove all low powered batteries to avoid leakage and damage. Replace only with new batteries of the recommended type.
- When cleaning the display and casings, use a soft damp cloth only. Do not use solvents or scouring agents as they may mark the LCD and casings.
- Do not submerge the unit in water. Furthermore, fix all parts in place where the units are adequately protected against moisture and rain.
- Special care shall be taken when handling a damaged LCD display. The liquid crystals can be harmful to user's health.
- Do not make any repair attempts to the unit. Return them to their original point of purchase for repair by a qualified engineer. Opening and tampering with the unit may invalidate their guarantee.
- Never touch the exposed electronic circuit of the device as there is a danger of electric shock should it become exposed.
- Do not expose the units to extreme and sudden temperature changes, this may lead to reduce their accuracy.
- Batteries are the single largest cause of customer support cases. Please use plain **Alkaline** batteries testing no less than 1.48 on a voltmeter or with an expiration date 7 years in the future.

Battery Low Icons

- When the batteries need to be replaced in the Wireless Outdoor Sensor, the LCD will display the "TX" icon. **TX**
- When the batteries need to be replaced in the Wireless Display, the LCD will display the "RX" icon. **RX**

Battery Replacement



We recommend that you replace the batteries in all units regularly to ensure optimum accuracy of these units. Please see the battery life in the specifications below.

Help us to keep our environment clean. Return used batteries to an authorized depot.

Troubleshooting

Visit www.weatherdirect.com/help for information on troubleshooting.

Specifications

Temperature Range

Outdoor Range: -39.8°F to +139.8°F (-39.8°C to 59.8°C)

Update Interval: Every 4.5 seconds

Battery Life

Wireless Display (without Severe Weather Alerts Activated): Up to 3 Years

Wireless Display (with Severe Weather Alerts Activated): Up to 2 Years

Wireless Outdoor Sensor: Up to 2 Years

Dimensions

Wireless Display: 8.26" L x 2.92" W x 5.67" H

Wireless Gateway: 6.63" L x 1" W x 1.56" H

Wireless Outdoor Sensor: 1.5" L x .83" W x 5.05" H

Weather Direct® Update Rate

Every 6 Hours

Weather Direct® Wireless Range

Up to 330 Feet (open air)

Power Requirements

- ★ **NOTE:** Rechargeable batteries are not recommended due to the wide variation in performance between brands and types. Please use only fresh Alkaline batteries.

Wireless Display: 3 "C" **Alkaline** Batteries (not included)

Wireless Gateway: Included AC Adapter & LAN Cable

Wireless Temperature Sensor: 2 "AA" **Alkaline** Batteries (not included)

Liability Disclaimer

- The manufacturer and supplier cannot accept any responsibility for any incorrect readings and any consequences that occur should an inaccurate reading take place.
- This product is designed for use in the home only as indication of the temperature and weather forecast for the selected location.
- This product is not to be used for medical purposes or for public information.
- The specifications of this product may change without prior notice.
- This product is not a toy. Keep out of the reach of children.

FCC Statements

Statement according to FCC part 15.21:

Modifications not expressly approved by this company could void the user's authority to operate the equipment.

Statement according to FCC part 15.105:

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

RF Exposure:

This device is a very low power transmitter. There are no restrictions regarding RF Exposure requirement.

Warranty Information

La Crosse Technology, Ltd provides a 1-year limited warranty on this product against manufacturing defects in materials and workmanship.

This limited warranty begins on the original date of purchase, is valid only on products purchased and used in North America and only to the original purchaser of this product. To receive warranty service, the purchaser must contact La Crosse Technology, Ltd for problem determination and service procedures. Warranty service can only be performed by a La Crosse Technology, Ltd authorized service center. The original dated bill of sale must be presented upon request as proof of purchase to La Crosse Technology, Ltd or La Crosse Technology, Ltd's authorized service center.

La Crosse Technology, Ltd will repair or replace this product, at our option and at no charge as stipulated herein, with new or reconditioned parts or products if found to be defective during the limited warranty period specified above. All replaced parts and products become the property of La Crosse Technology, Ltd and must be returned to La Crosse Technology, Ltd

Replacement parts and products assume the remaining original warranty, or ninety (90) days, whichever is longer. La Crosse Technology, Ltd will pay all expenses for labor and materials for all repairs covered by this warranty. If necessary repairs are not covered by this warranty, or if a product is examined which is not in need of repair, you will be charged for the repairs or examination. The owner must pay any shipping charges incurred in getting your La Crosse Technology, Ltd product to a La Crosse Technology, Ltd authorized service center.

Your La Crosse Technology, Ltd warranty covers all defects in material and workmanship with the following specified exceptions: (1) damage caused by accident, unreasonable use or neglect (including the lack of reasonable and necessary maintenance); (2) damage occurring during shipment (claims must be presented to the carrier); (3) damage to, or deterioration of, any accessory or decorative surface; (4) damage resulting from failure to follow instructions contained in your owner's manual; (5) damage resulting from the performance of repairs or alterations by someone other than an authorized La Crosse Technology, Ltd authorized service center; (6) units used for other than home use (7) applications and uses that this product was not intended or (8) the products inability to receive a signal due to any source of interference.

This warranty covers only actual defects within the product itself, and does not cover the cost of installation or removal from a fixed installation, normal set-up or adjustments, claims based on misrepresentation by the seller or performance variations resulting from installation-related circumstances.

LA CROSSE TECHNOLOGY, LTD WILL NOT ASSUME LIABILITY FOR INCIDENTAL, CONSEQUENTIAL, PUNITIVE, OR OTHER SIMILAR DAMAGES ASSOCIATED WITH THE OPERATION OR MALFUNCTION OF THIS PRODUCT. THIS PRODUCT IS NOT TO BE USED FOR MEDICAL

PURPOSES OR FOR PUBLIC INFORMATION. THIS PRODUCT IS NOT A TOY. KEEP OUT OF CHILDREN'S REACH.

This warranty gives you specific legal rights. You may also have other rights specific to your State. Some States do not allow the exclusion of consequential or incidental damages; therefore the above exclusion of limitation may not apply to you.

Support services are limited to the WA-1242U system components supplied and usage of the weather direct web site. Any other computer system components or Internet communication configurations (e.g. the computer, network, router, Internet browser, ISP service, etc.) are outside of the scope of our services.

For warranty work, technical support, or information contact:
Hours: Mon-Fri. – 8:00 AM to 5:30 PM Central

e-mail: support@weatherdirect.com

La Crosse Technology, Ltd
2817 Losey Blvd. S.
La Crosse, WI 54601
Phone: 608.785.7935
Fax: 608.796.1020

For information on other La Crosse Technology® products,
e-mail: sales@lacrossetechnology.com

All rights reserved. This handbook must not be reproduced in any form, even in excerpts, or duplicated or processed using electronic, mechanical or chemical procedures without written permission of the publisher. This handbook may contain mistakes and printing errors. The information in this handbook is regularly checked and corrections made in the next issue. We accept no liability for technical mistakes or printing errors, or their consequences. All trademarks and patents are acknowledged.